Devices covered by this template :
Panic Rim Device and Fire Exit Rim Device.

TEMPLATE

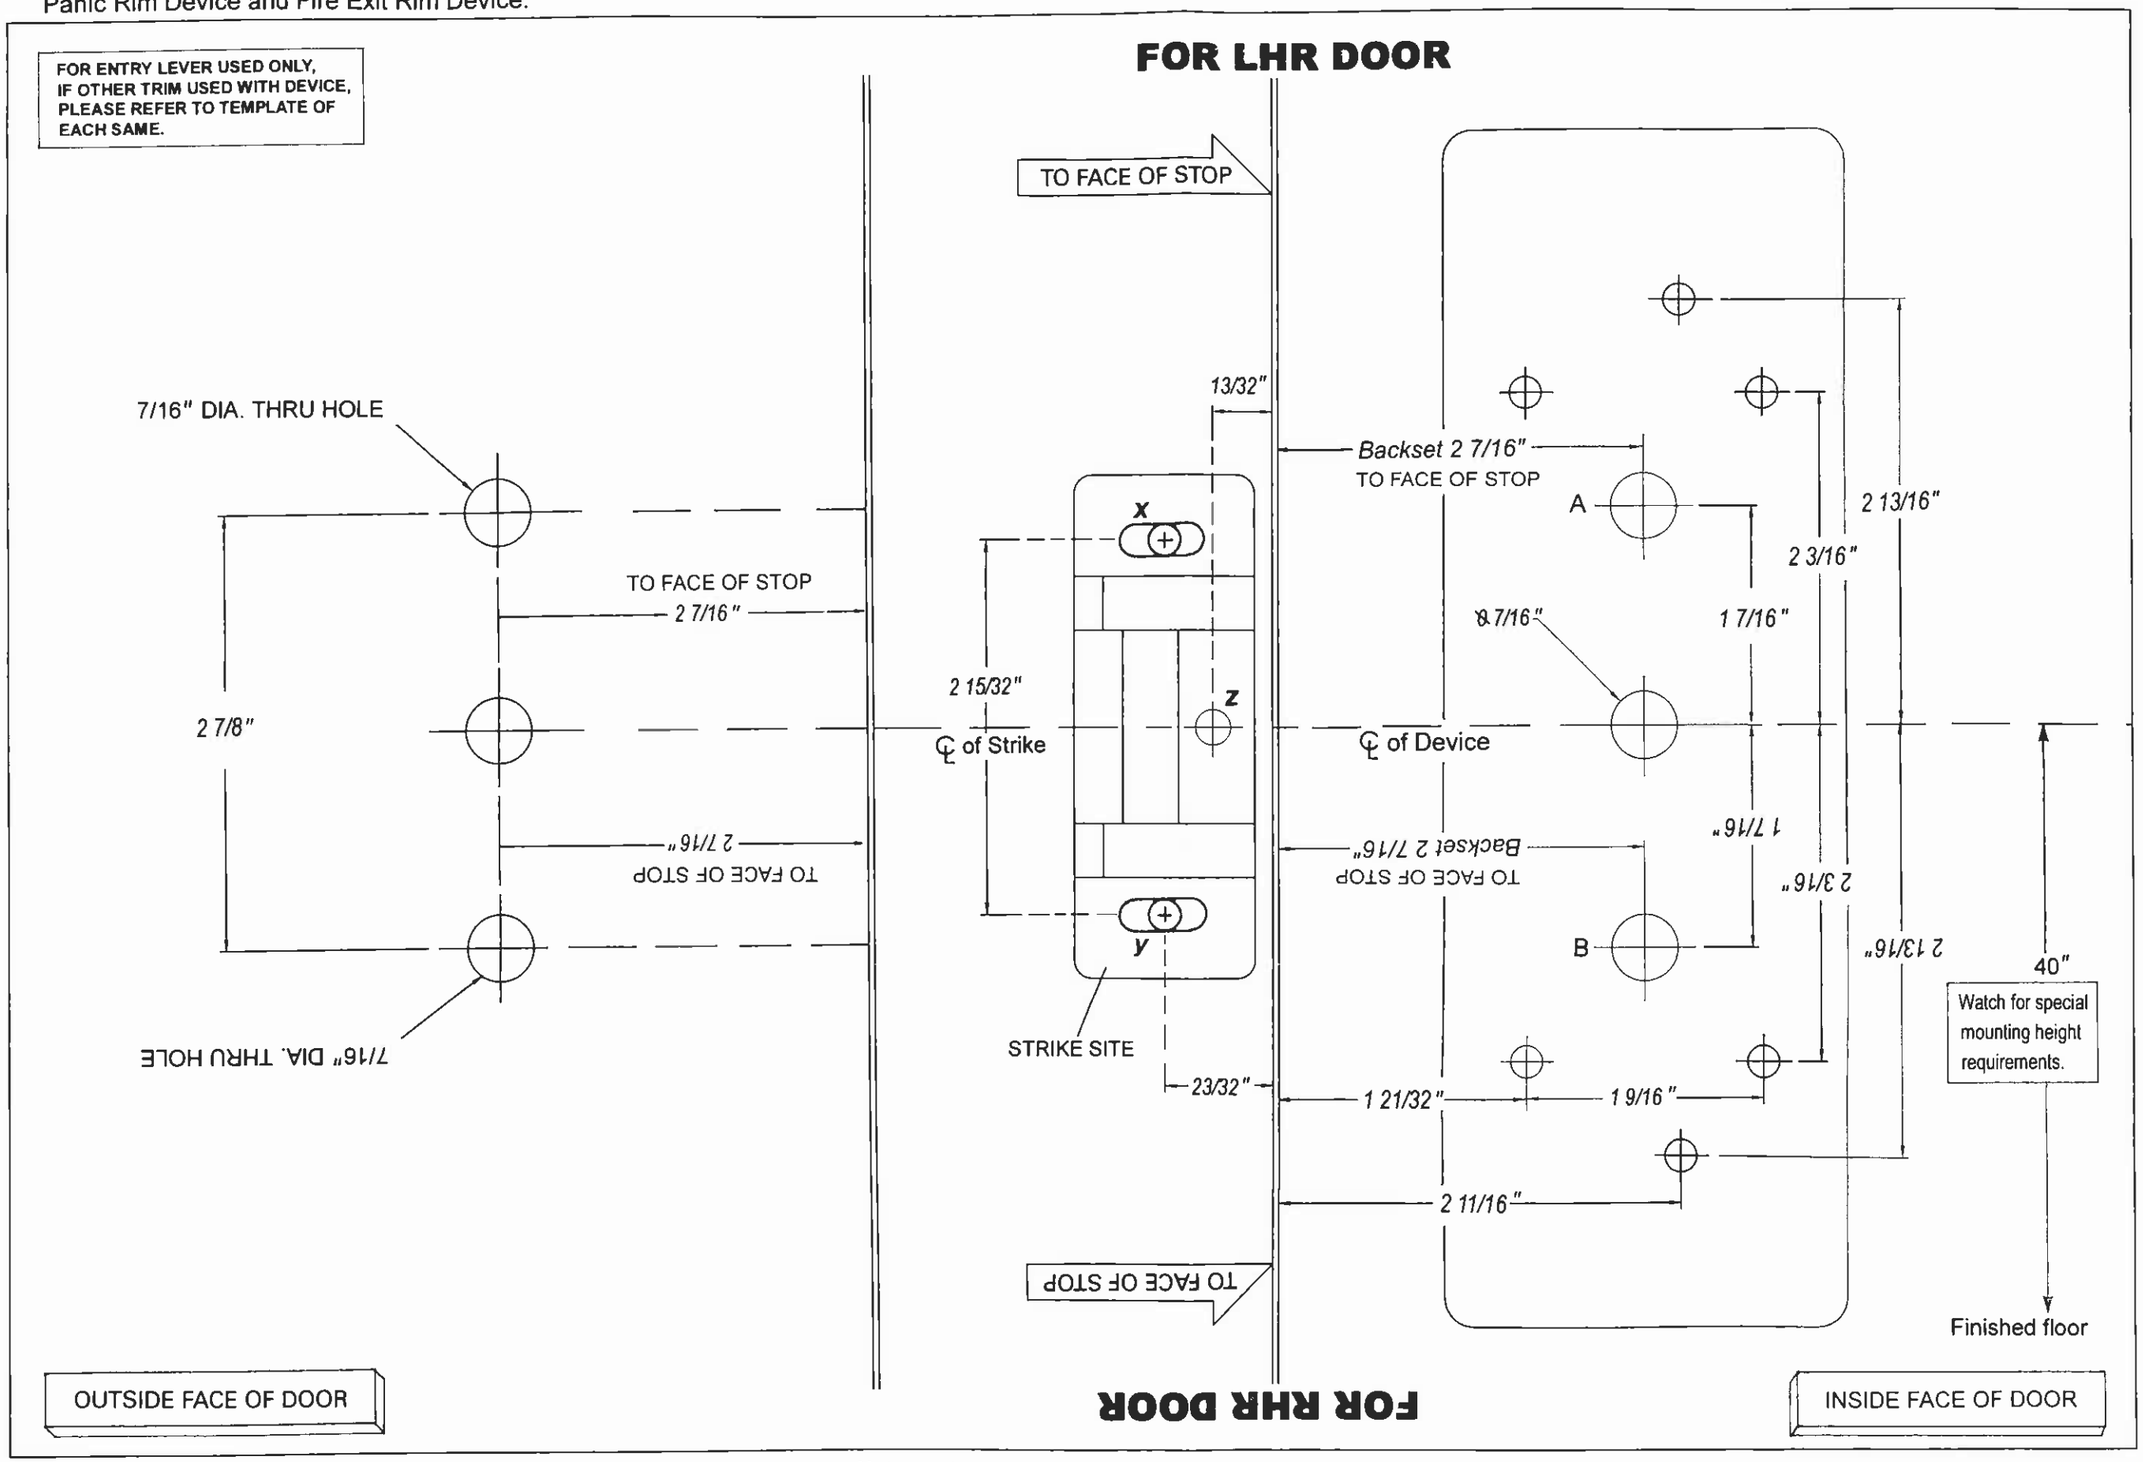

DEVICE MOUNTING HOLES

For Metal Door surface Application :

1. Drill 7/32" dia. Holes as same as marked.
2. Use #1/4 – 20 Tap

For Sex Bolts Application :

Metal Door : 9/32" Drill Inside
13/32" Drill Outside

Wood Door : 13/32" Drill Thru

(Suggest to fix Device Chassis by Sex Bolts)

STRIKE MOUNTING HOLES

1. Drill 7/32" dia. Holes X 2
2. Use #1/4 – 20 Tap

TEMPLATE : 1. Chassis of Latch Assembly
2. Strike

Note : Before tighten screws on x, y positions, to adjust the strike for engaging with latch bolt first. After fixing the 2 screws.

A, B : Setting holes for mounting posts of Entry Lever handle