Door	Lock prep	Deadbolt Prep	Hinge	Light Kit	Color
MD100001	161	Yes	RHR	10x10	OW
MD100002	161	Yes	LHR	10x10	OW
MD100003	161	Yes	RHR	10x10	Gray
MD100004	161	Yes	LHR	10x10	Gray
MD100005	161	Invisible	RHR	none	OW
MD100006	161	Invisible	LHR	none	OW
MD100013	161	Invisible	RHR	none	Gray
MD100014	161	Invisible	LHR	none	Gray
MD100015	161	Yes	RHR	none	OW
MD100016	161	Yes	LHR	none	OW
MD100018	161	Invisible	RHR	10x10	OW
MD100019	161	Invisible	LHR	10x10	OW

NOTES:

1. **DOOR ASSEMBLY TO BE SECURED TO WOOD STUD USING #10 SCREWS. USE SUFFICIENT LENGTH TO PENETRATE STUD AT LEAST 1". SCREW LENGTH WILL VARY DEPENDING ON SHEATHING THICKNESS.**
2. **4 1/2" WALL ILLUSTRATED**
3. **THRESHOLD FLASHING STRIP IS SUPPLIED WITH EACH DOOR. INSTALLATION IS OPTIONAL.**
4. **ALL DIMENSIONS ARE IN INCHES, UNLESS OTHERWISE SPECIFIED.**

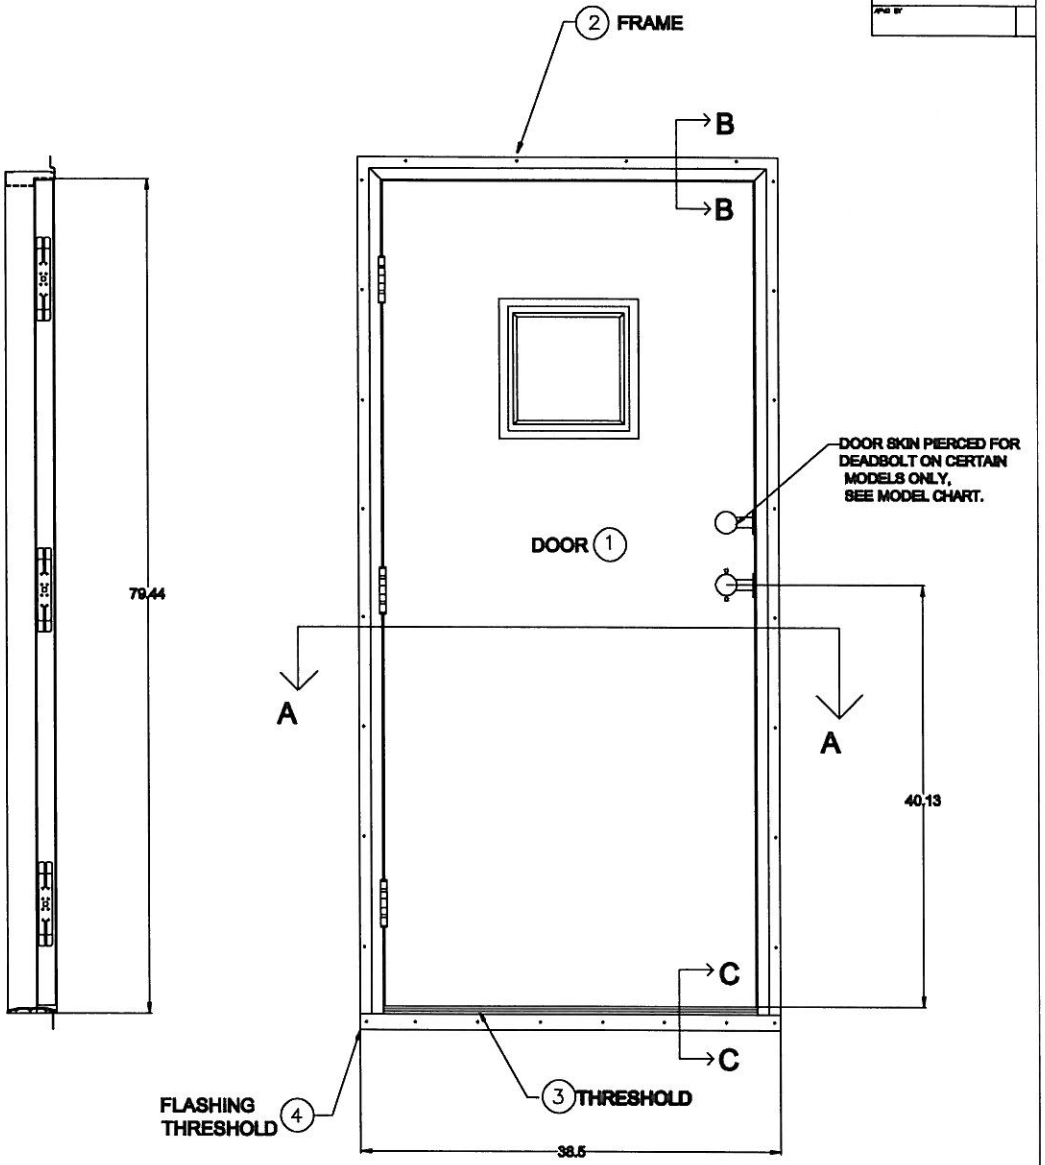

THESE DRAWINGS AND SPECIFICATIONS ARE CONFIDENTIAL AND PROPRIETARY TO TELL MANUFACTURING AND SHALL NOT BE REPRODUCED OR COPIED OR USED AS THE BASIS FOR THE MANUFACTURE OR SALE OF APPARATUS AND/OR DEVICES WITHOUT PERMISSION.

STANDARD TOLERANCE			MODULAR DOOR – TELSTAR
0.0 ± .030			
0.00 ± .030			
0.000 ± .005			
0.0000 ± .0005			
ANGULAR DIM. 1/2°	TELL MANUFACTURING, INC.	B.BOMBERGER	C MMD10000 0
FRAC.DIM.TOL. 1/32			